

## QUICK START


- 1.** Connect **substation** (outside loud speaker) to **OUT** on **master station**, using extension wires (provided).
- 2.** Plug **power supply** to **POWER** on **master station**, turn on **master station**.
- 3.** Press + Hold **master station BT Pair** button, Bluetooth light (upper right corner) blinks quickly (blue ↔ red), ready for pairing.
- 4.** Press + Hold **wireless headset On/Off** button until 'Bluetooth is connected' is heard over headset. System is ready for use.



**NOTE: Repeat the Steps 3 & 4 if Bluetooth connection is not established.**

Call Huafone technical support at (248) 629-0170 if you still have troubles setting up system.

## INSTALLATION AND OPERATION INSTRUCTION

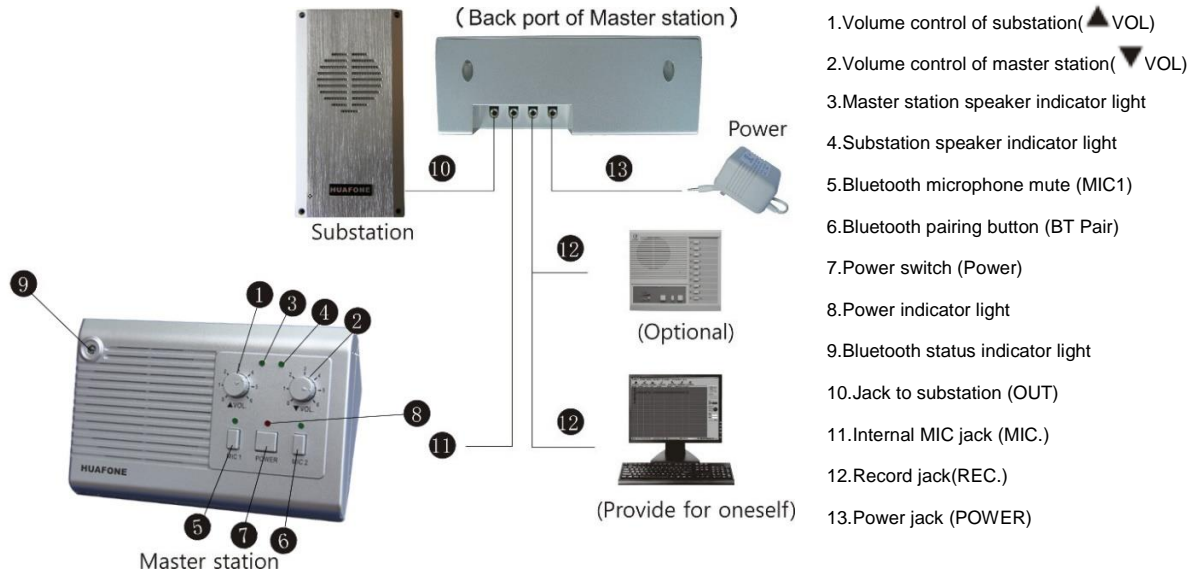

### Installation

1. Install master station and substation. Plug the substation wire into the jack 10 (**OUT**).
2. Connect the power transformer to an 110V power source and to the power jack 13 (**POWER**).
3. Press the power switch 7 to turn on the power indicator light 8; the unit is in normal working status.
4. Press internal MIC1 switch 5 and Bluetooth button. The two green lights indicate a two-way duplex communication is now established.

### Monitor, Talk-In, Record (Optional)

1. Connect In-Store-Communication (ISC) Kitchen Master Station to jack 12 (REC) on master station. Talk-in conversation cannot be heard by customers on the substations (used by staff members to monitor, train, or talk to POS window person).
2. Connect digital recording system (optional) to jack 12 (REC) to record, where law permits.

